




Peugeot 207/Citroen DS3 hard pipe installation instructions

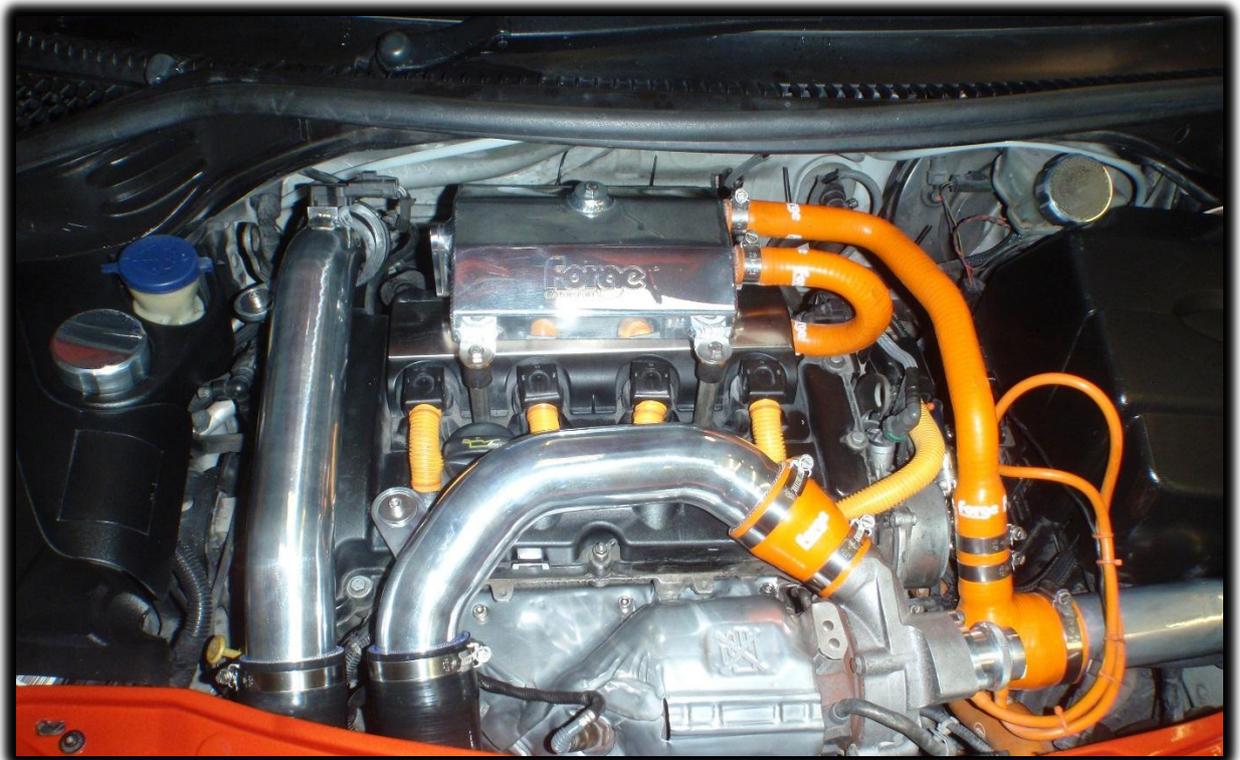

Tools Needed:

7mm Clamp Driver

10mm Socket

5mm Allen key

3mm Allen key


1. Remove stock boost pipes and map sensor.
2. Fit the rubber grommets and aluminium inserts as shown below.




3. Re fit the MAP sensor and attach with the button head bolt and washer supplied in the kit.



4. Fit the boost inlet pipe first as the bolt by the dip stick is hard to get too, use the bolts and washers supplied in the kit.

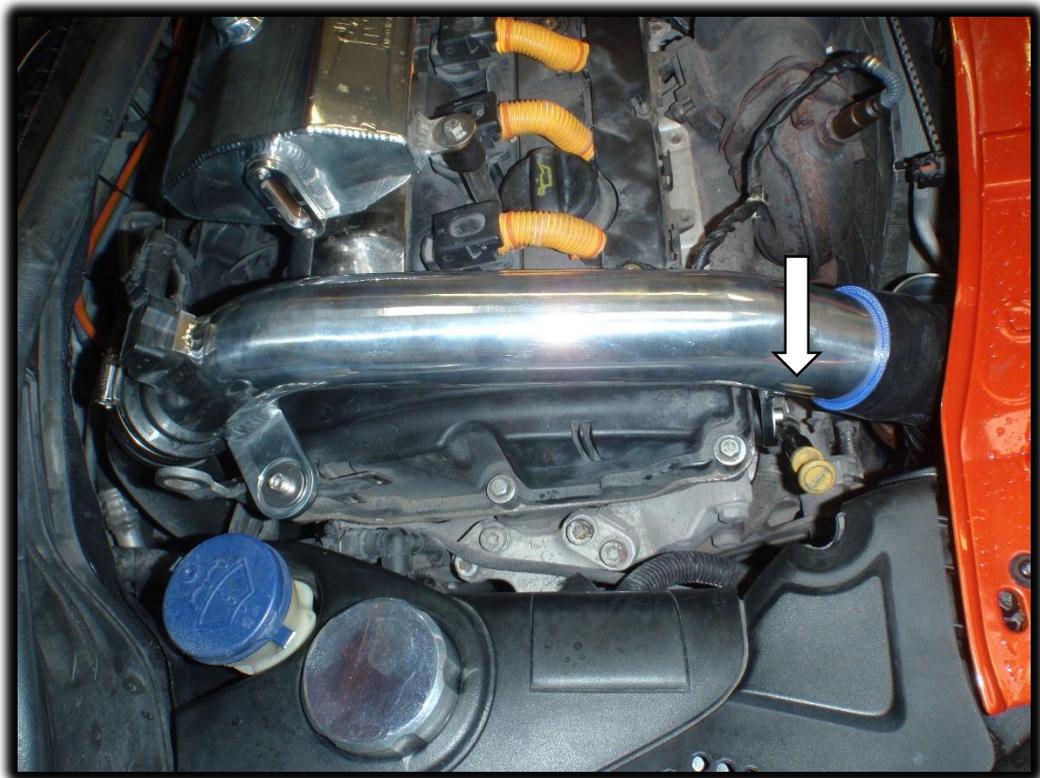

5. The fitting of the inlet boost pipe will be made easier if the dip stick and bracket is eased forward.

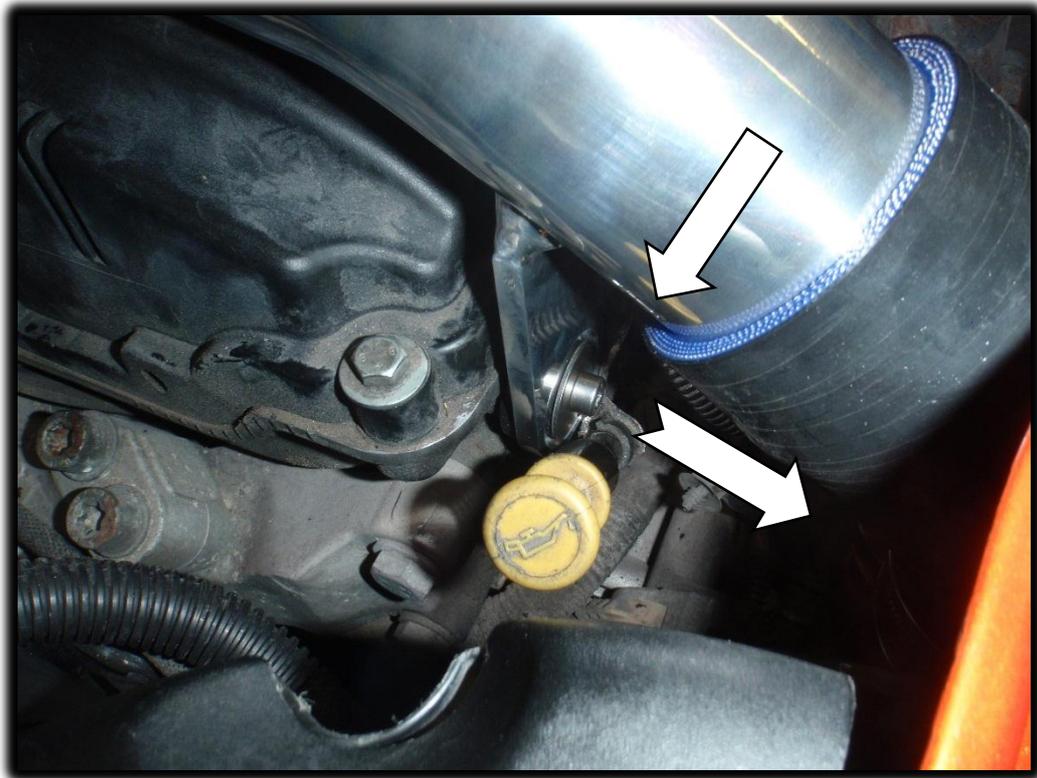

6. Once the inlet boost pipe is fitted and secured attach the boost outlet again using bolts and washers supplied.



ENGINEERED FOR PERFORMANCE