



FMINLH26 Fitting Instructions



Please thoroughly read through and familiarise yourself with these instructions in their entirety prior to beginning any part of the installation process of any component. Please also ensure the vehicle and engine has cooled down sufficiently to avoid risking possible skin burns or other injury.

TOOLS NEEDED:


Hose Clamp removal tool/Long nose pliers.

7mm socket and suitable drive


1. Open the bonnet and locate the inlet pipe. Using a 7mm socket and ratchet loosen the hose clamp attaching the inlet hose to the air box.



2. Using pliers or a hose clamp removal tool loosen the hose clamp attaching the inlet pipe to the turbo adaptor. The inlet pipe can now be removed from the engine.

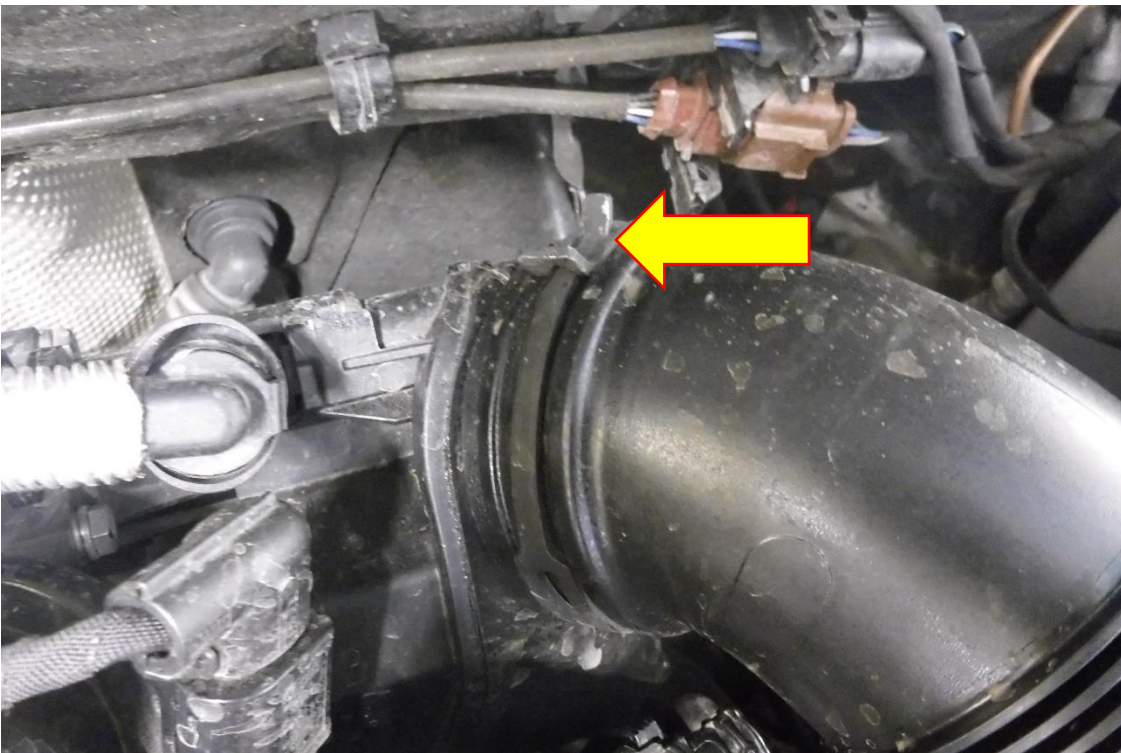

3. Fit the Forge Motorsport silicone hose in place large end to the airbox, small end to the turbo adaptor. Using a 7mm socket and ratchet secure the Forge Motorsport hose in place using the supplied hose clamps.

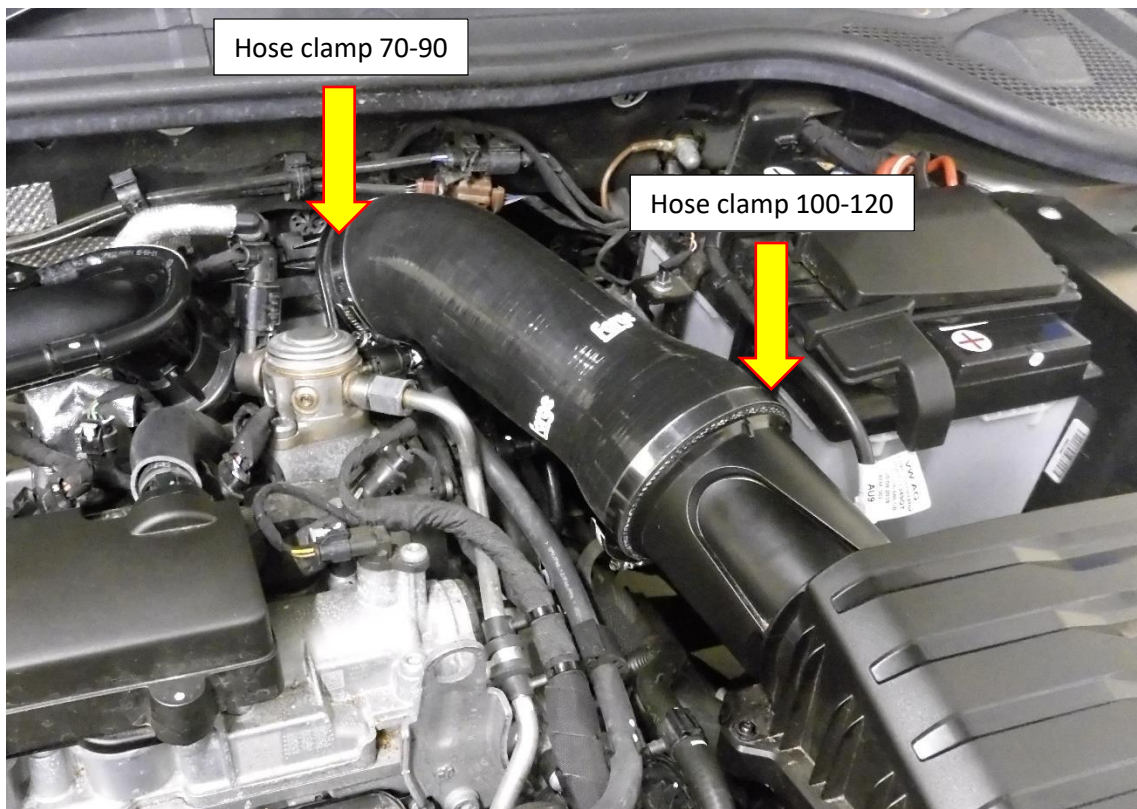

4. That is the installation of FMINLH26 complete, take your vehicle for a test drive and enjoy your new Forge Motorsport product.

Check out www.forgemotorsport.co.uk
and www.forgemotorsport.com
For a full range of performance products for your vehicle.

*If you have any questions or concerns about this product
or anything else, please feel free to contact your local or preferred
Forge Motorsport Dealer/Installer or you may contact us directly.*

Forge Motorsport UK (+44)1452 380999
Forge Motorsport USA (407)-447-5363
Forge Motorsport ASIA +886-4-22516887

info@forgemotorsport.co.uk
sales@forgemotorsport.com
sales@forgemotorsport.asia

